
Printing instructions: WinSLAMM v. 10 input/output:

## Step 1


- 1. Open WinSLAMM and open your project file
- 2. In WinSLAMM, Select File/Print Input File
- 3. Choose Print Input Data To Printer and Select Print Drainage System Image
- 4. Hit Print

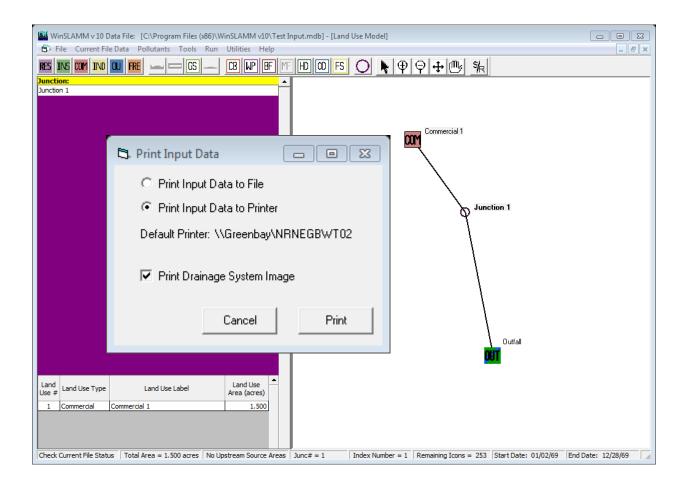

#### **Alternate Method:**


### Step 1a: Print Diagram

- 1. Open WinSLAMM to main screen showing diagram of modeled system
- 2. Open Microsoft WORD
- 3. In WORD, select Insert/Screenshot and select the Screen that looks similar to the image below. Adjust size so it is readable if needed.
- 4. Print to printer or save file

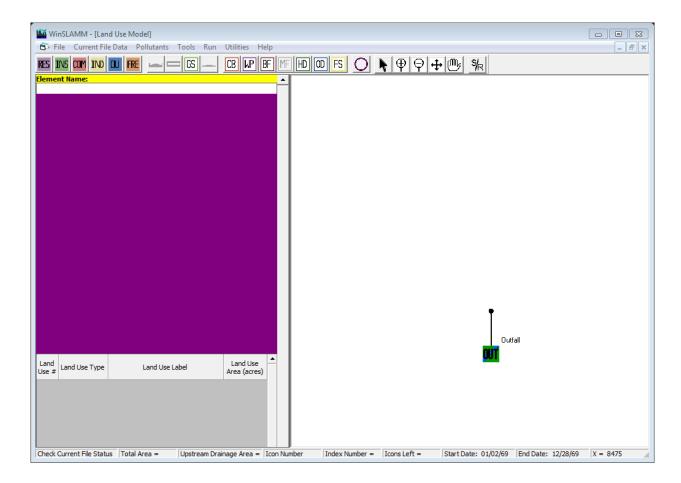


#### Step 1b: Print Input File

- 1. In WinSLAMM, Select File/Print Input File
- 2. Choose Print Input Data To File. This will create a .txt file that can usually be opened with the Notebook program.
- 3. Select folder to save file in. Default folder is typically C:\Users\Your User Name\AppData\Local\VirtualStore\Program Files (x86)\WinSLAMM v10
- 4. Open file in Notebook to print.

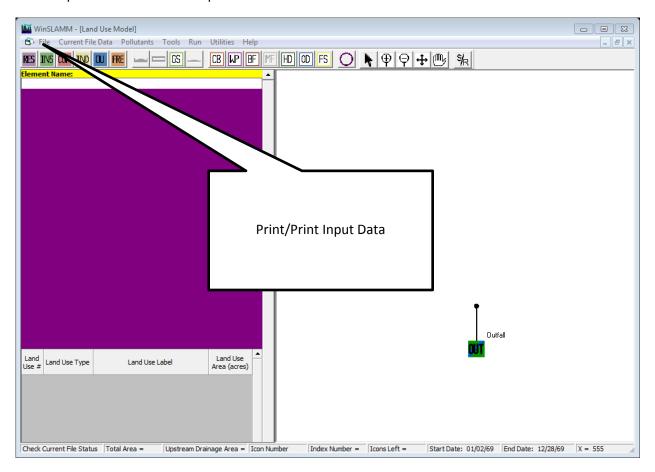

#### Step 2

- 1. Open WinSLAMM and open your project file
- 2. Select the S/R box or Run/Current Project File
- 3. Choose 'Print Output Summary to Text File' box and save file
- 4. Select folder to save file in. Default folder is typically C:\Users\Your User Name\AppData\Local\VirtualStore\Program Files (x86)\WinSLAMM v10
- 5. Open file in Notebook and select print setup. Change layout to Landscape. Print file.

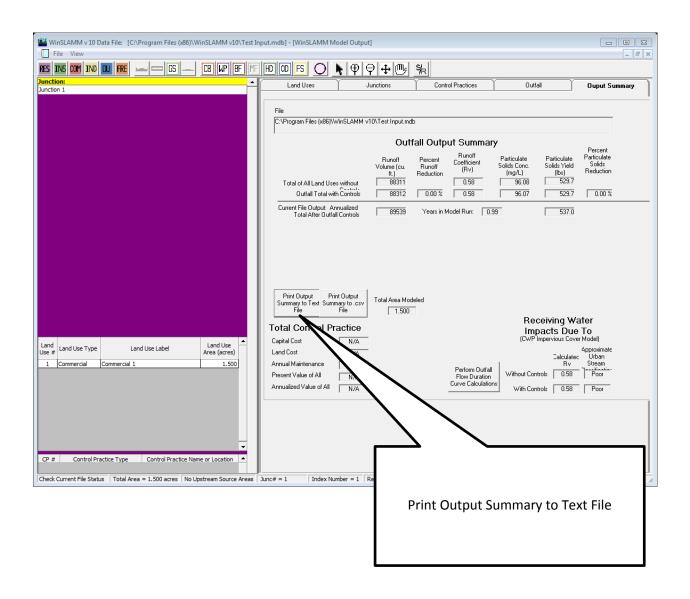

# Sample Input/Output:

